


Z3V0E1500A


Ref #	Part #	Description
1	17204-Z3F-000	PLATE, OIL TRAP
2	17211-Z3F-000*	ELEMENT, AIR CLEANER
3	17220-Z3V-010	HOUSING, AIR CLEANER
4	17231-Z3V-000	COVER, AIR CLEANER
5	90009-Z3F-901	BOLT, SOCKET (5X25)
6	90018-Z3E-901	BOLT, SOCKET (5X16)
7	90028-Z3V-000	SCREW, SPECIAL (6X16)
8	91501-Z3F-000	COLLAR, AIR CLEANER HOUSING (A)
9	91502-Z3F-000	COLLAR, AIR CLEANER HOUSING (B)
10	91503-Z3F-000	COLLAR, AIR CLEANER HOUSING (C)
11	94050-05000	NUT, FLANGE (5MM)

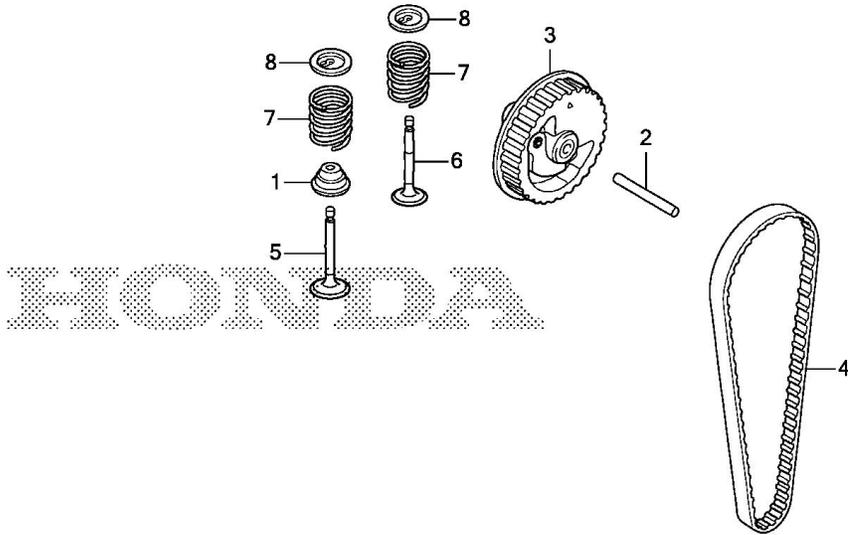

FR.

Z3V0E1000


Ref #	Part #	Description
1	12209-Z3E-003	SEAL, VALVE STEM
2	14126-Z0Z-003	ROLLER (4X31.8)
3	14320-Z3V-000	PULLEY, CAMSHAFT
4	14400-Z3V-003	BELT, TIMING (78ZU5 G-310)
5	14711-Z3V-000	VALVE, IN.
6	14721-Z0Z-800	VALVE, EX. (ZE/ZE)
6	14721-Z3F-000	VALVE, EX. (FE)
7	14751-Z0Z-000	SPRING, VALVE
8	14771-Z3F-000	RETAINER, VALVE SPRING

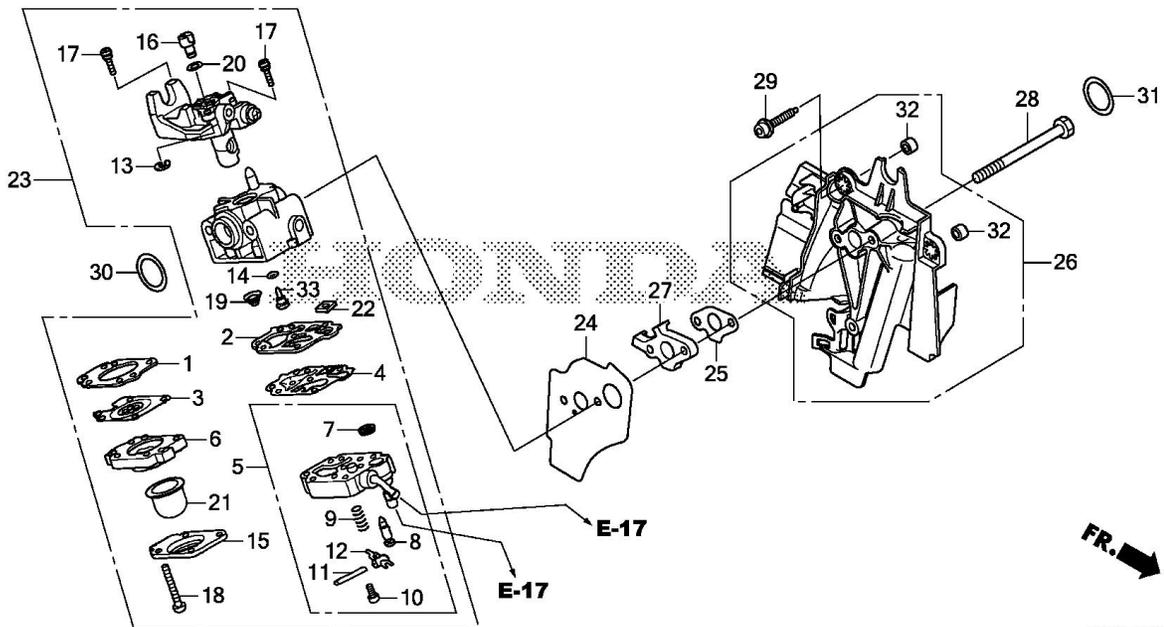

Z3V0E1400


Ref #	Part #	Description
1	16010-ZM3-004	GASKET, METERING DIAPHRAGM
2	16011-Z0H-013	GASKET, PUMP
3	16013-Z0H-003	DIAPHRAGM ASSY., METERING
4	16014-ZM3-004	DIAPHRAGM, PUMP
5	16015-Z6J-023	BODY ASSY., PUMP (CARBURETOR NO.)
6	16017-ZM3-004	BODY ASSY., AIR PURGE
7	16018-ZM3-802	SCREEN, INLET
8	16019-ZM3-004	VALVE, INLET NEEDLE
9	16020-ZM3-004	SPRING, METERING LEVER
10	16021-ZM3-004	SCREW, METERING LEVER PIN
11	16022-ZM3-014	PIN, METERING LEVER
12	16023-ZM3-004	LEVER, METERING
13	16024-Z0H-003	RING, RETAINING
14	16025-ZM3-004	O-RING
15	16026-ZM3-004	COVER, PRIMER PUMP
16	16027-ZM3-004	SWIVEL
17	16028-ZM3-004	SCREW, THROTTLE COLLAR
18	16029-ZM3-004	SCREW, PUMP COVER
19	16030-ZM3-004	SPRING, PUMP
20	16031-ZM3-004	WASHER
21	16032-ZM3-004	PUMP, PRIMER
21	16032-ZM3-014	PUMP, PRIMER
22	16035-ZM3-802	FILTER, FUEL INLET
23	16100-Z3V-802*	CARBURETOR ASSY. (WYB 53)
23	16100-Z3V-803	CARBURETOR ASSY. (WYB 53A)

23	16100-Z3V-804	CARBURETOR ASSY. (WYB 53A)
24	16221-Z3V-000	GASKET, CARBURETOR
25	16231-Z3V-000	GASKET, SHROUD
26	19631-Z3V-000	SHROUD
27	19632-Z3V-000	SPACER, SHROUD
28	90014-Z3F-000	BOLT (5X58)
29	90018-Z3E-901	BOLT, SOCKET (5X16)
30	91301-ZM3-000	O-RING (14.8X2.4)
31	91308-Z3V-000	O-RING (14.8X2.4)
32	91506-ZM3-000	COLLAR A, HEAD COVER
33	99101-Z0Z-0420	JET (#42)
33	99101-Z0Z-0430	JET (#43)
33	99101-Z0Z-0440	JET (#44)

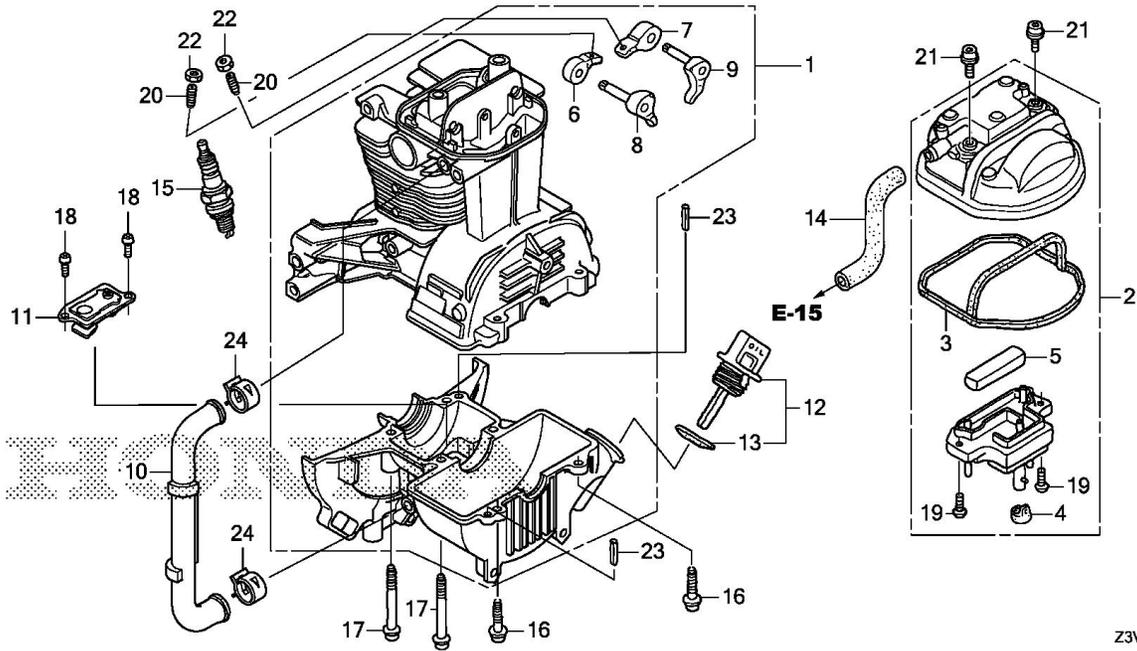


Ref #	Part #	Description
1	10100-Z3V-415	CRANKCASE SET
2	12310-Z0Z-000	COVER, CYLINDER HEAD
2	12310-Z0Z-010	COVER, CYLINDER HEAD
3	12312-Z0Z-300	SEAL, HEAD COVER
4	12314-Z0H-300	GROMMET, HEAD COVER
5	12367-Z0H-000	FILTER, BREATHER
6	14431-Z3V-003	ARM, IN. VALVE ROCKER
7	14441-Z3V-003	ARM, EX. VALVE ROCKER
8	14730-Z0Z-000	LIFTER, IN. VALVE
9	14740-Z0Z-000	LIFTER, EX. VALVE
10	15422-Z3V-000	TUBE, OIL
11	15510-Z3E-000	PLATE ASSY., OIL OUTLET VALVE
12	15600-Z3F-000*	CAP ASSY., OIL FILLER
13	15625-Z0T-800	GASKET, OIL FILLER CAP
14	15721-Z0Z-000	TUBE, BREATHER
15	31914-Z0H-003	SPARK PLUG (CMR4H) (NGK)
15	31915-Z0H-003*	SPARK PLUG (CMR5H) (NGK)
15	31916-Z0H-003	SPARK PLUG (CMR6H) (NGK)
16	90009-Z3E-901	BOLT, SOCKET (5X20)
17	90010-Z3V-003	BOLT, SOCKET (5X39)
18	90013-Z3E-003	SCREW, PAN (4X8)
19	90013-Z3F-003	SCREW, PAN (4X8)
20	90017-Z0H-000	SCREW, TAPPET ADJUSTING
21	90019-Z0H-003	BOLT, SOCKET (5X12)
22	90206-ZM3-000	NUT, TAPPET ADJUSTING

23	94305-40102	PIN, SPRING (4X10)
24	95002-41200-08	CLAMP, TUBE (D12)

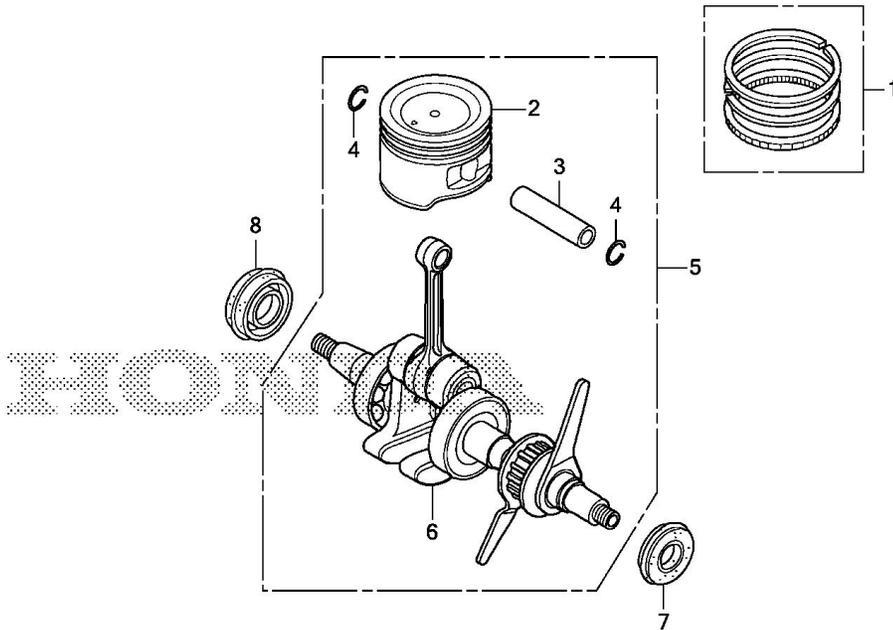


FR. 
Z3V0E0700

Ref #	Part #	Description
1	13010-Z3V-013	RING SET, PISTON
2	13101-Z3V-000	PISTON
3	13111-Z3V-000	PIN, PISTON
4	13115-Z3V-000	CLIP, PISTON PIN (9MM)
5	13310-Z3V-020	CRANKSHAFT
6	13310-Z3V-PA2	CRANKSHAFT
7	91212-Z3E-003	OIL SEAL (10X20X5)
8	91214-Z3F-003	OIL SEAL (15X25X6)

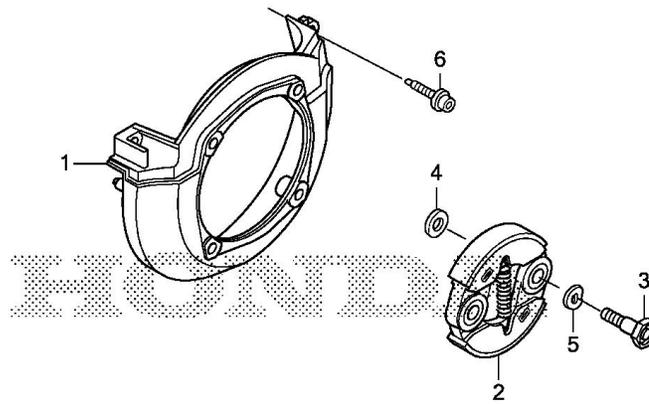

Z3V0E1200


Ref #	Part #	Description
1	19611-Z3V-000	COVER, FAN
2	22000-Z3V-003	CLUTCH ASSY.
3	22253-Z3F-000	BOLT, CLUTCH (8MM)
4	22254-Z3F-000	WASHER, CLUTCH (8X17)
5	22255-Z3F-000	WASHER, WAVE (10MM)
6	90009-Z3E-901	BOLT, SOCKET (5X20)

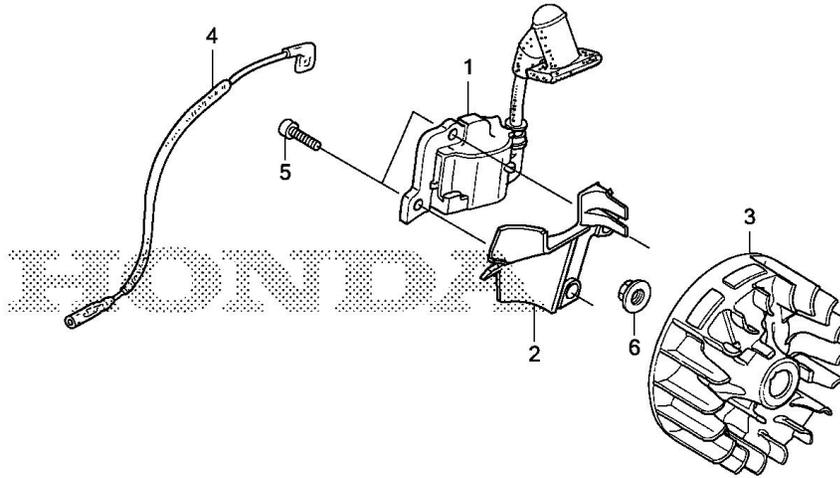

FR. →


Z3V0E1900

Ref #	Part #	Description
1	30500-Z3V-003	COIL ASSY., IGNITION
1	30500-Z3V-J01	COIL ASSY., IGNITION
2	30523-Z3V-000	CLIP, AIR GUIDE
3	31110-Z3V-013	FLYWHEEL
4	32195-Z0Z-000	WIRE, STOP SWITCH
5	90012-Z3E-003	BOLT, SOCKET (4X14)
6	94050-08000	NUT, FLANGE (8MM)

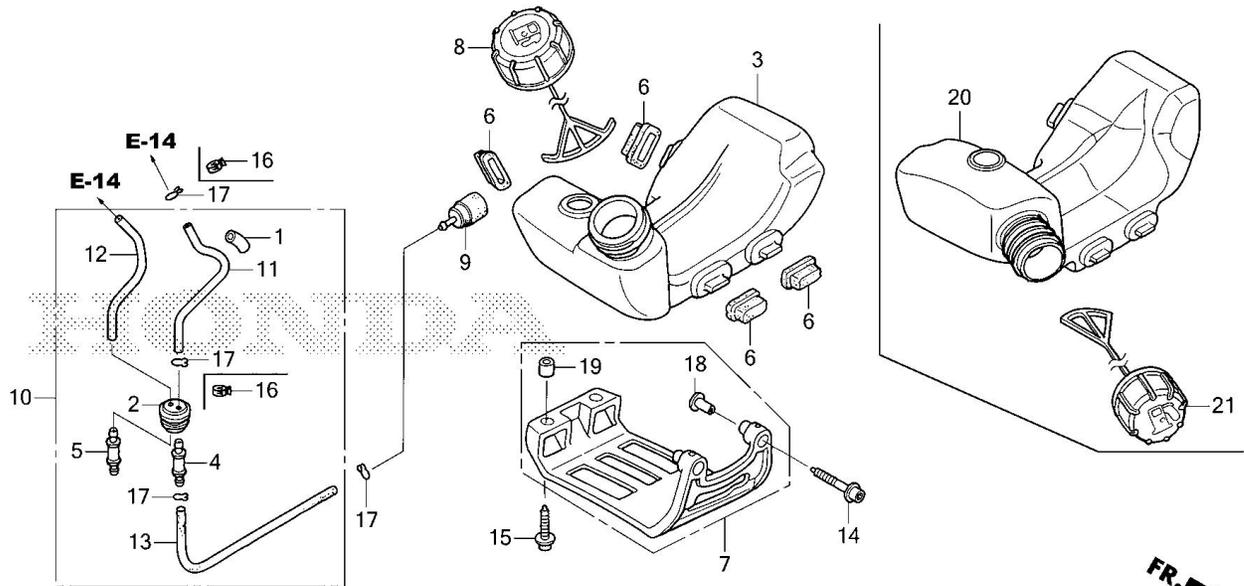


Z3V0E1700A

Ref #	Part #	Description
1	16865-Z6J-010	PROTECTOR, TUBE
1	16865-Z6J-810	PROTECTOR, TUBE
2	17504-ZM3-003	GROMMET, FUEL TUBE
3	17511-Z6K-821	TANK, FUEL
4	17519-Z6J-003	JOINT, FUEL TANK
5	17519-ZM5-003	FITTING
6	17533-Z0H-000	RUBBER, TANK MOUNTING
8	17620-ZM3-818*	CAP ASSY., FUEL TANK
9	17672-Z0H-003*	FILTER, FUEL
10	17700-Z3V-PB1	GROMMET ASSY., FUEL TANK
10	17700-Z3V-PB2	GROMMET ASSY., FUEL TANK
11	17701-Z3V-802	TUBE, FUEL (FKM)
11	17701-Z3V-803	TUBE, FUEL (FKM)
12	17702-Z3V-600	TUBE, FUEL RETURN
13	17703-Z6K-801	TUBE A, FUEL
16	90601-Z6J-003	CLAMP, TUBE
16	90601-Z6J-801	CLAMP, TUBE (D5.5)
17	91401-Z3E-000	CLIP, TUBE (B1.5)

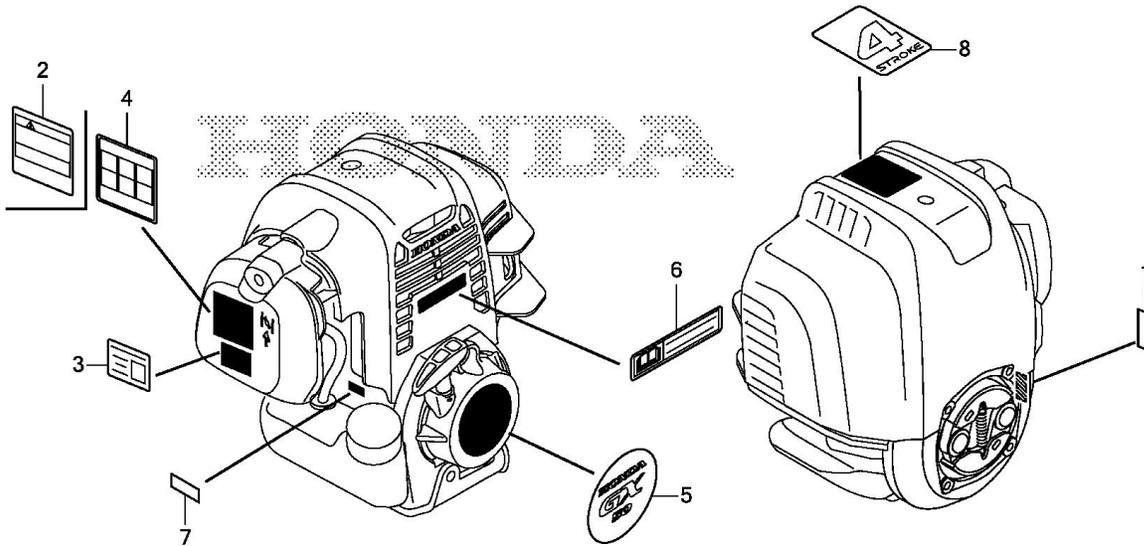


Z3V0E2800

Ref #	Part #	Description
1	87114-Z3E-000	LABEL, WARNING (NOT CERTIFIED FOR SALE)
2	87516-Z6J-000	MARK, OPERATOR CAUTION (ENGLISH)
2	87516-Z6J-010	MARK, OPERATOR CAUTION (ENGLISH)
3	87518-Z3V-000	LABEL, QR CODE (SERVICE)
5	87521-Z3V-000	MARK, EMBLEM
5	87521-Z3V-010	MARK, EMBLEM
7	87601-Z4A-000	MARK, TYPE (S3)
8	87660-Z3V-000	MARK (4-STROKE)

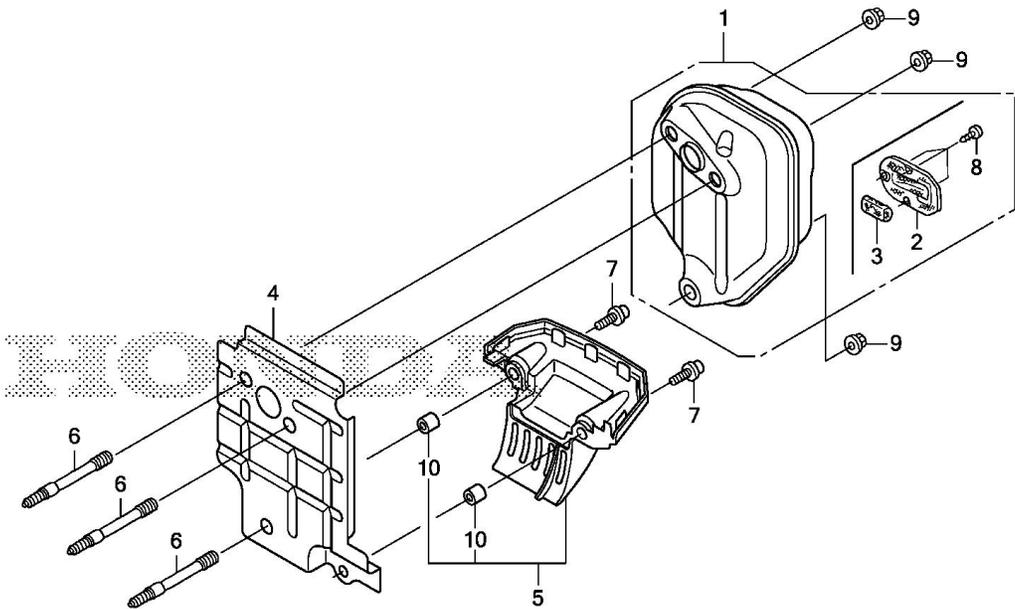


Z3V0E1600

Ref #	Part #	Description
1	18310-Z3V-800	MUFFLER
2	18350-Z0Z-801	ARRESTER, SPARK
3	18354-Z0Z-800	FILTER, EX.
4	18515-Z3V-000	GUIDE, AIR
5	18518-Z3V-000	GUIDE, AIR (LOWER)
6	90001-Z0Z-013	BOLT, STUD (5X56.5)
7	90018-Z3E-901	BOLT, SOCKET (5X16)
8	90055-ZE1-000	SCREW, TAPPING (4X6)
9	90136-SM4-901	NUT, SELF-LOCK (5MM)
10	91506-ZM3-000	COLLAR A, HEAD COVER

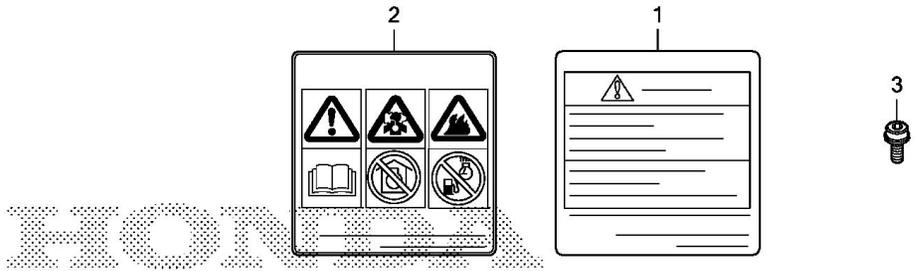


Z3V0E4000A

Ref #	Part #	Description
1	87516-Z6J-801	MARK, OPERATOR CAUTION (FRENCH)
2	87519-Z6J-000	MARK, OPERATOR CAUTION (PICTOGRAPH)
2	87519-Z6J-010	MARK, OPERATOR CAUTION (PICTOGRAPH)

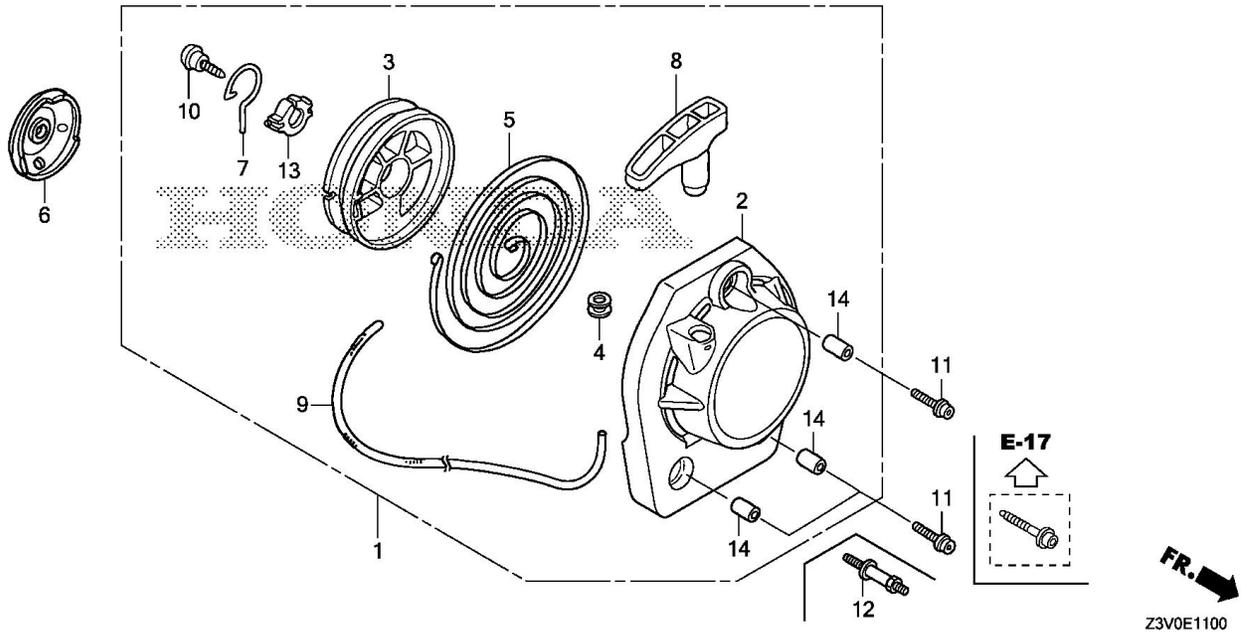


Ref #	Part #	Description
1	28400-Z3V-003*	STARTER ASSY., RECOIL
2	28414-Z3V-003	CASE, RECOIL STARTER
3	28421-ZM3-003	REEL, RECOIL STARTER
4	28433-ZM3-003	GUIDE, ROPE
5	28442-Z0H-003	SPRING, RECOIL STARTER
6	28451-Z0H-003	PULLEY, RECOIL STARTER
7	28459-Z0H-003	SWINGARM
8	28461-Z3F-M01	KNOB, RECOIL STARTER
9	28462-ZM3-003	ROPE, RECOIL STARTER
10	90012-ZM3-003	SCREW, SETTING
11	90018-Z3E-901	BOLT, SOCKET (5X16)
13	91504-ZM3-003	COLLAR
14	91506-ZM3-000	COLLAR A, HEAD COVER

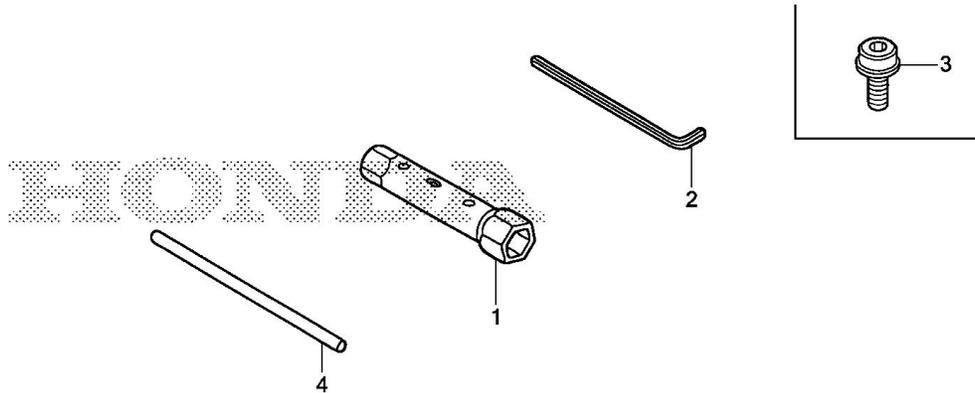

Z3V0E2900

Ref #	Part #	Description
1	89216-VJ3-J10	WRENCH, PLUG (16X19)
2	89221-KW3-000	WRENCH, HEX. (4MM)
3	90011-Z0H-811	BOLT, SOCKET (5X9)
4	99005-01000	BAR A, HANDLE

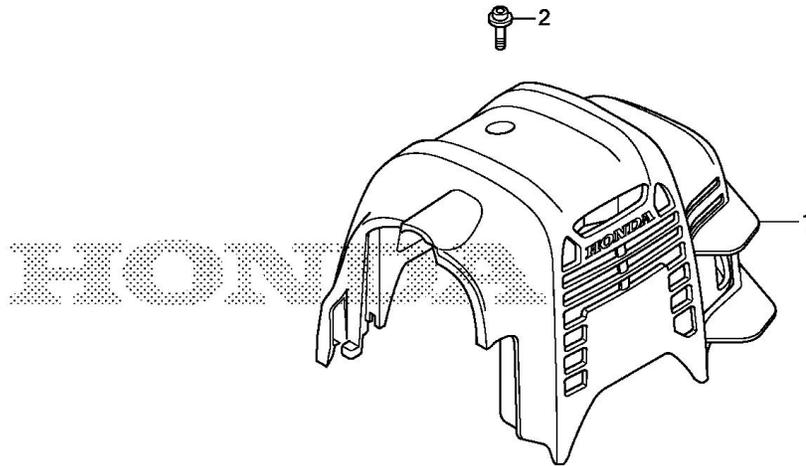

Z3V0E2700

Ref #	Part #	Description
1	19720-Z3V-010ZB	COVER, TOP *R280* (POWER RED)
1	19720-Z3V-010ZC	COVER, TOP *NH1* (BLACK) (NA USE ALT:19720-Z3V-000ZC)
2	90015-Z3E-900	BOLT, TOP COVER